



External reset ? External test ?????? ?? ?? ?????????????? tdp , tda , tdc ?????? ?????? ?????? ?????? ?????? ? ???????? ?????? ??????

????

?? ???? ??????? ??? ?????? ???????

???

: code

X96DSA030R21E ? Aux. Supply : 20-260VAC

X96DSA030T21E ? Aux. Supply : 20-260VAC , ?????? Alarm TCS

X96DSA300R21E ? Aux. Supply : 20-260VAC

X96DSA300T21E ? Aux. Supply : 20-260VAC , ????? ???? Alarm TCS

Function

1. TRIP current setting I_n trimmer.

2. TRIP delay setting ?t trimmer.

3. Alarm current setting I_{al} trimmer.

4. Alarm delay setting ?talatrimmer.

5. Multicolor Bargraph.

6. Programming selector.

7. LED ON indicates that the device is powered.

8. LED ALARM indicates alarm status (fixed light) or CT disconnection (Slow blinking LED) or TCS failure (Fast blinking LED).

9. LED TRIP indicates that the device has tripped.

10. TEST pushbutton for relay TRIP test.

11. RESET pushbutton for relay manual restore after TRIP

??????? ??

???? ???? ???? ??? ?????? ???? ?????.

// //