



code:

A48D5A050E205 : Aux. Supply : 115-250 VAC ,

A48D3A300L203 : Aux. Supply : 115-230 VAC , ~~~~~~

A46D5A030L20E : Aux. Supply : 20-260VAC ,

X48DSA300X20E ? Aux. Supply : 20-260VAC

X48DSA300L20E ? Aux. Supply : 230 VAC , ? ? ? ? ? ? ? ? ? ? ? ? ? ? ? ?

Type A earth leakage relay - 48x48 mm

The new range of type A earth leakage relays with separate toroid provides maximum safety and reliable protection in compliance with EN 60947-2 Annex M. Tripping current I_n adjustable from 30mA to 30A. Settings by means of front dip-switch and trimmer. Dual TRIP relay. Connection by means of external closed-core or split-core toroids of the TDC-TDA series.

Function

- 1. TRIP current setting I_n trimmer.
- 2. TRIP delay setting ?t trimmer.
- 3. Programming selector.
- 4. LED ON indicates that the device is powered.
- 5. LED TRIP indicates that the device has tripped (*In X_DSA_L models, it also indicates the % level of the leakage current).
- 6.TEST pushbutton for relay TRIP test.
- 7. RESET pushbutton for relay manual restore after TRIP

?????? ??

???? ???? ???? ???? ???? ???? ????.

// //